



LG G Pad 8.3 Battery Replacement

This guide will show you how to replace the battery.

Written By: Mario Salguero



INTRODUCTION

If your battery isn't working, it may be time to replace it. This guide will show you how to replace the battery.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [iOpener Kit](#) (1)
-

Step 1 — Back Panel




- With the tablet face down, pull out the SD card slot cover.
- Using a Philips #000 screwdriver, remove the 3mm screw in the SD card slot.

Step 2

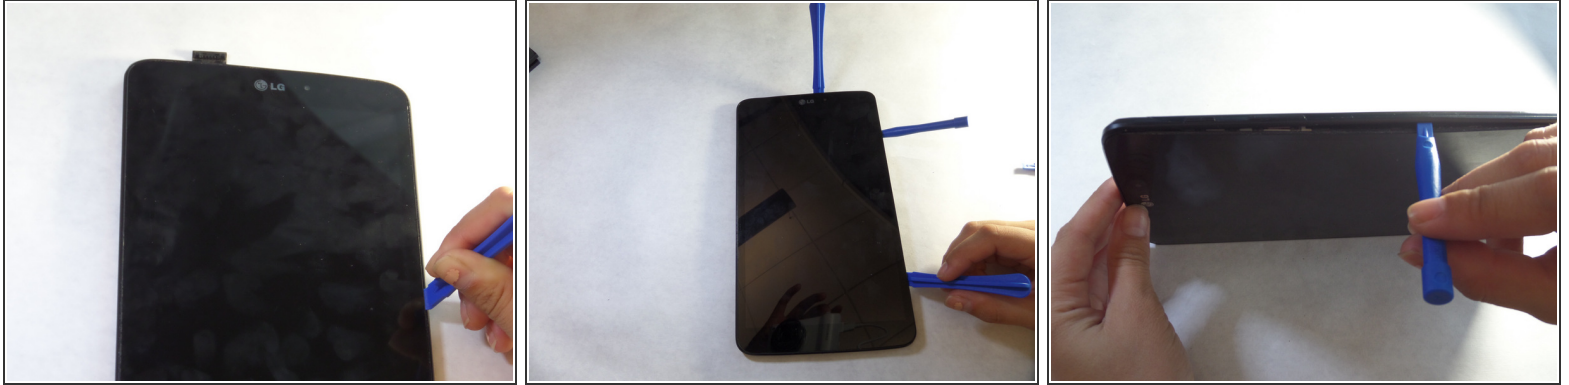


- Insert a plastic opening tool in the small crevasse between the screen and the back.
 - Pry the screen away from the back panel.
 - Repeat this on each edge of the device.
- i** We found it helpful to leave multiple plastic opening tools wedged in the crevasse to prevent it from closing.
- i** This requires heavy force. The back of the device is attached with adhesive. If the back panel is too hard to remove, use the [iOpener](#).

Step 3

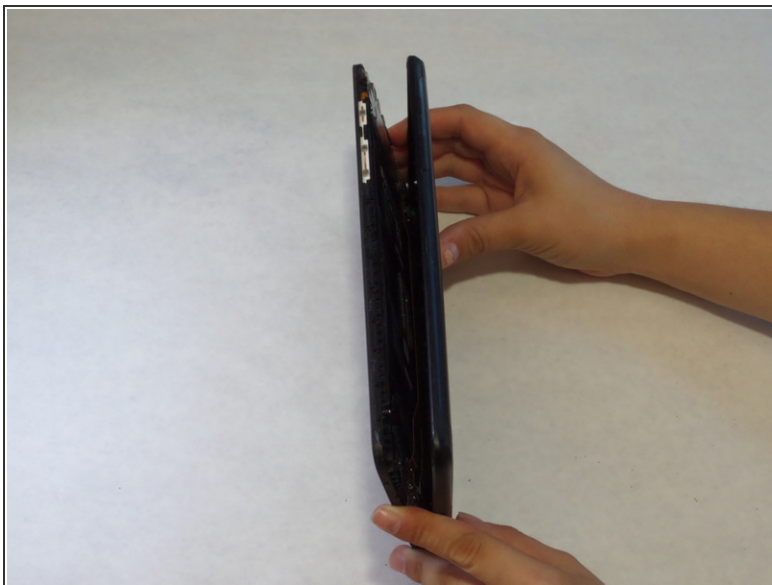

- After using the plastic opening tools, pry open the device with your hands, removing the back panel from the screen.

Step 4 — Speaker

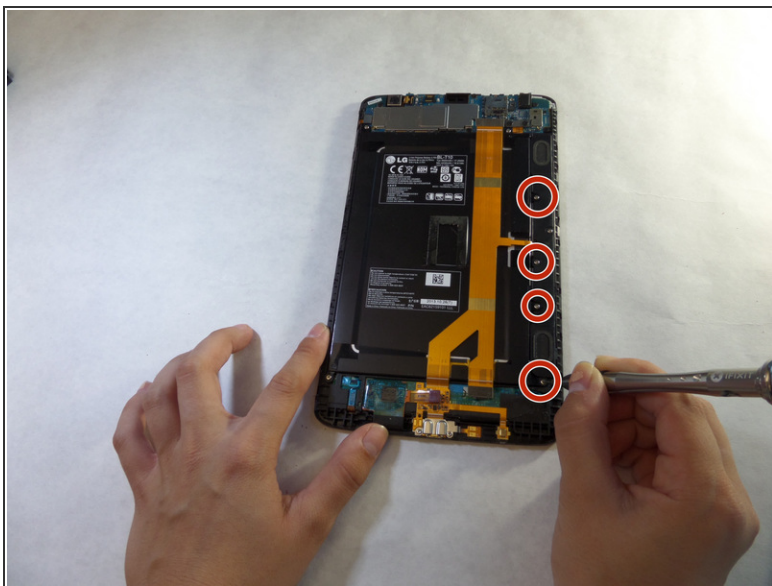


- Remove the four 3 mm Phillips screws that hold down the speaker.
- ☑ These screws are very small so make sure to keep track of them. You can use iFixit's [Pro Magnetic Project Mat](#) to help.

Step 5




- Use your fingers to remove the speaker.

Step 6 — Battery

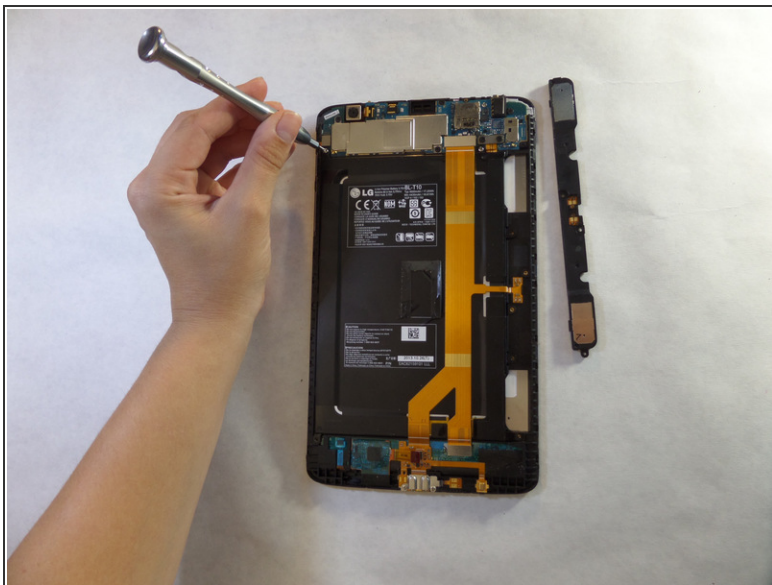


- With a Philips screwdriver #000 unscrew the 3mm screws at the corners of the battery.

Step 7

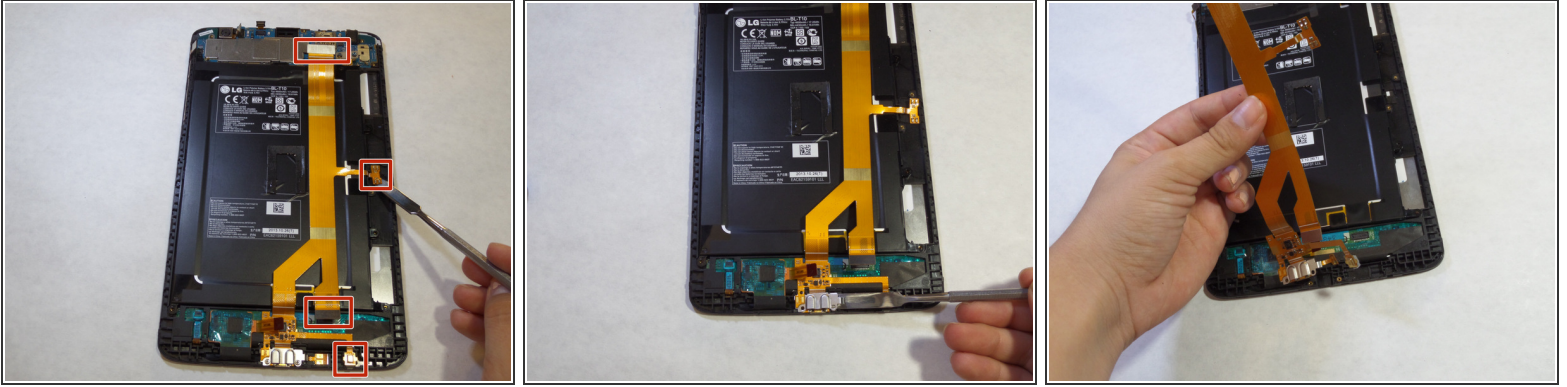


- Using a spudger or plastic opening tool, disconnect the ribbon cable from the right side of the device, where it is attached with adhesive.
- ⚠ These images use a metal spudger, which has the potential to damage the device. Use a plastic opening tool or standard spudger instead.

Step 8

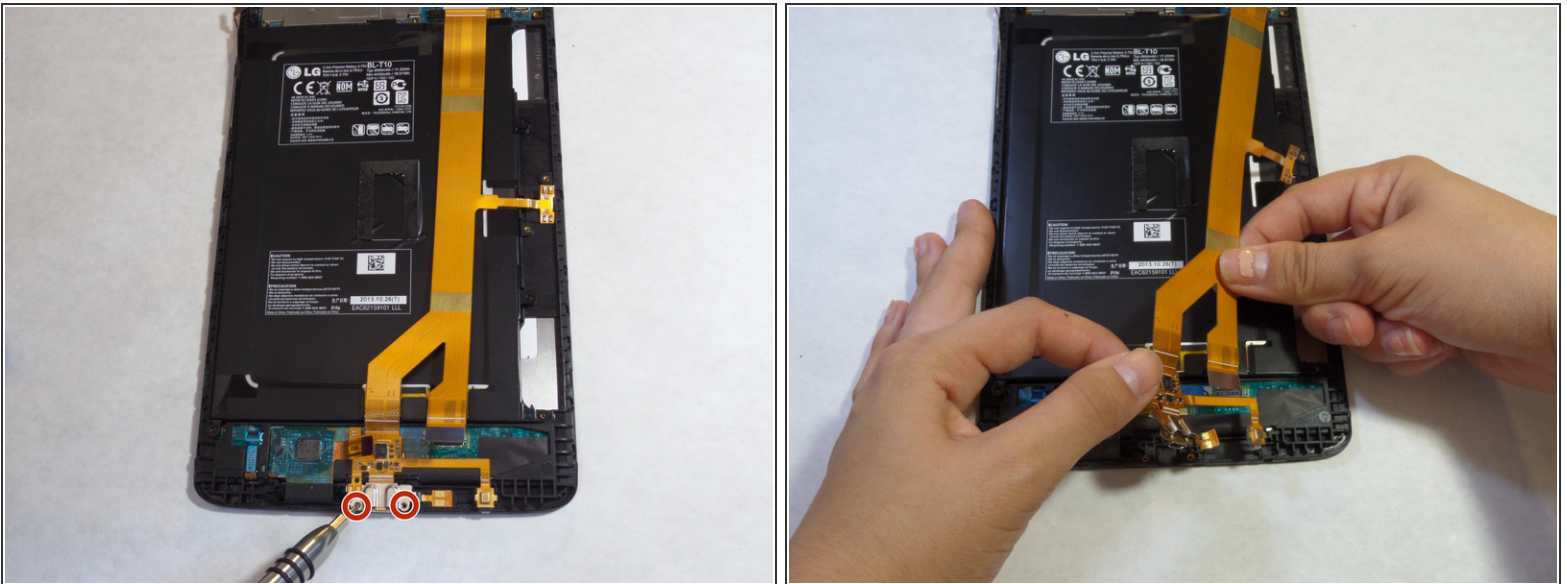

- Use the Philips screwdriver #000 to remove the 3mm screws at the bottom of the tape.
- Remove the yellow tape from the device.

Step 9

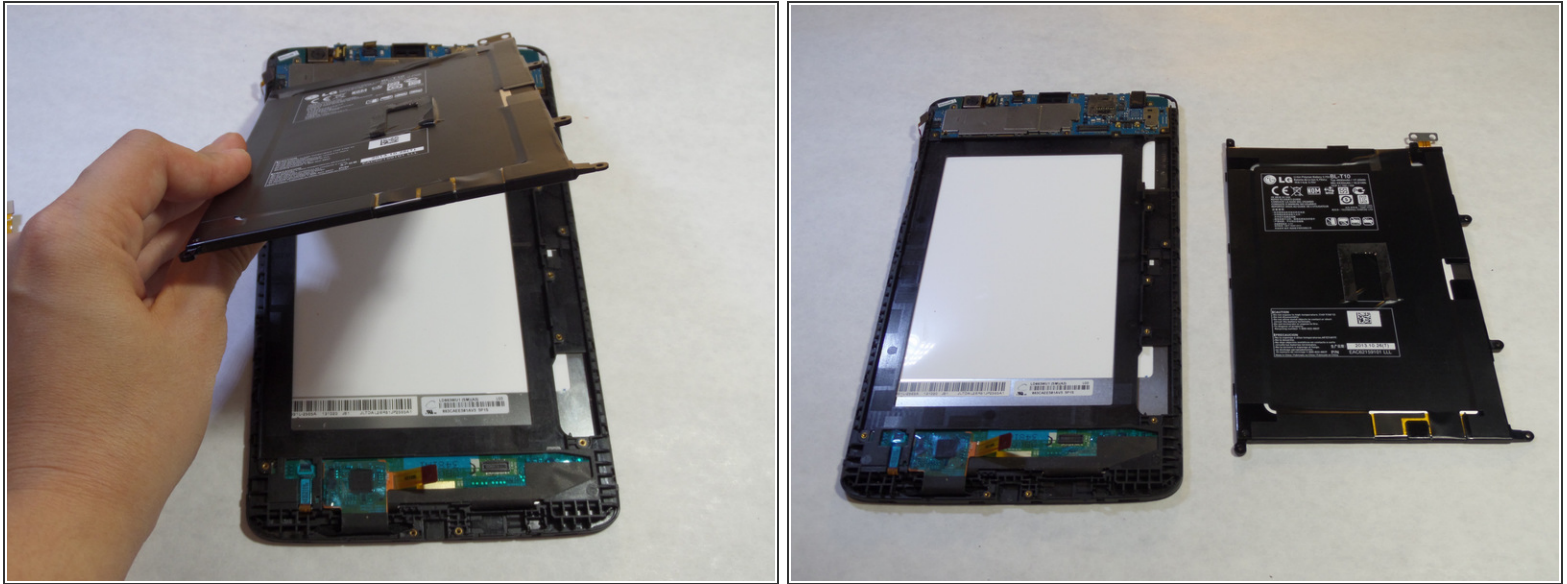

- Unhook the battery from where it is attached at the top of the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-10 04:19:18 AM.